


ASI2816 - How to replace a Tuner Module

S.G.Turner 4/2022


1. Remove AC power to the ASI2816



2. Remove RF and analog connections to the affected tuner module. Remove the three screws securing the module to the chassis

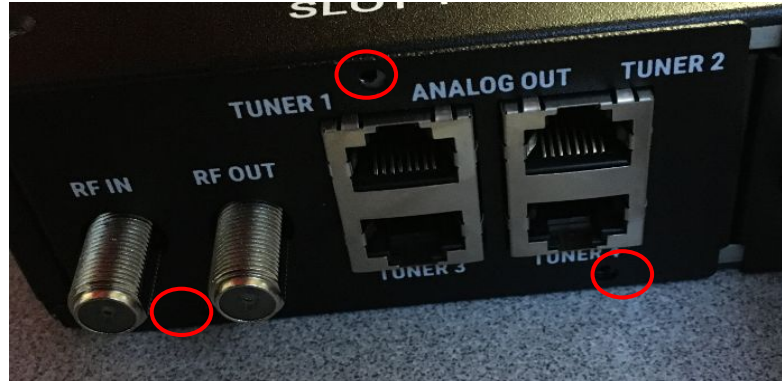

3. Slide module out. Slide new module in. Secure with the three screws

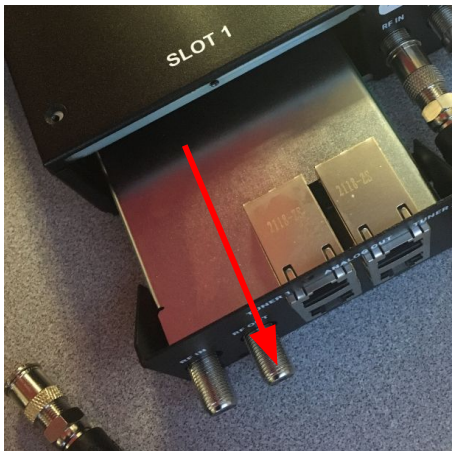

4. Reconnect RF connections and AC power

